


MONTÁŽNÍ BALÍČEK – MONTÁŽNY BALÍČEK – INSTALLATION PACKAGE
– MONTAGERAKET – МОНТАЖНЫЙ ПАКЕТ – МОНТАЖЕН ПАКЕТ
– ÖSSZESZERELÉSI CSOMAG – PAKET ZA MONTAŽU – MONTAŽNI PAKET
– PACHET DE MONTAJ – МОНТАЖНИЙ ПАКЕТ


PRO STAVEBNÍ POUZDRO – PRE STAVEBNÉ PUZDRO – FOR POCKET
DOORFRAME – FÜR SCHIEBETÜRKASTEN – ДЛЯ ДВЕРНОЙ ПЕНАЛ
– ЗА СТРОИТЕЛНА КАСЕТА – FA TOKSZERKEZET
– ZA GRAĐEVINSKA KUĆIŠTA – ZA VGRADNE KASETE
– PENTRU CAZĂ DE CONSTRUIRE – ДЛЯ ДВЕРНИЙ ПЕНАЛ

JAP 705 NORMA




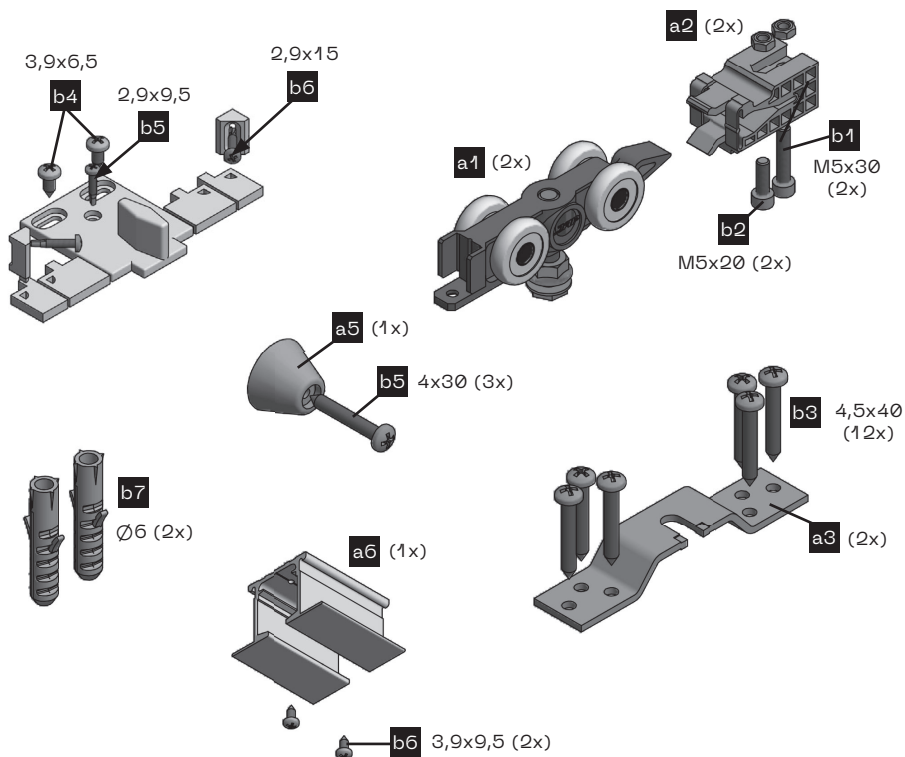





JAP

A.



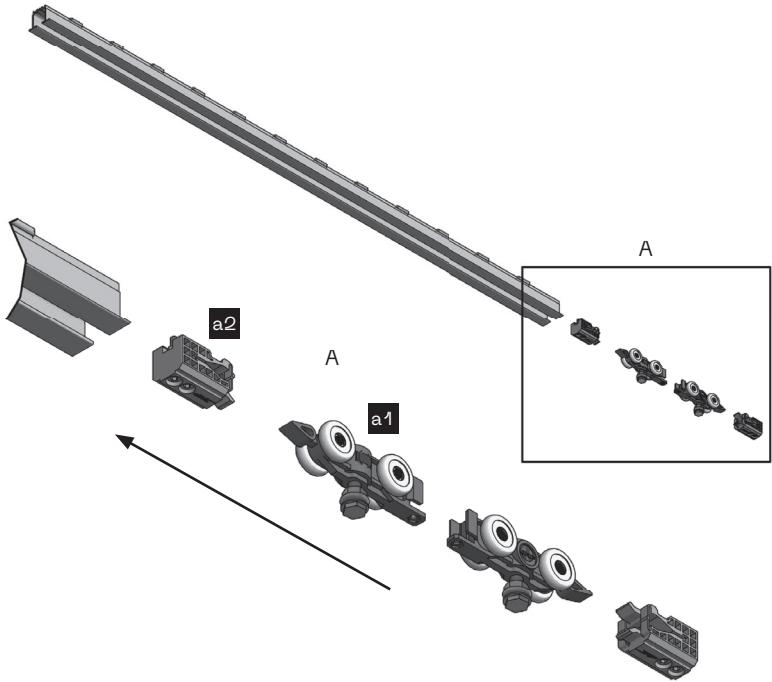


B.

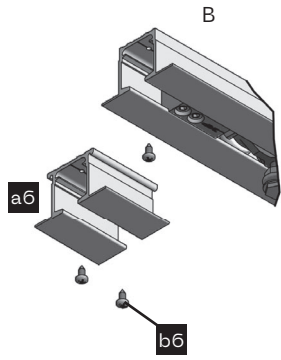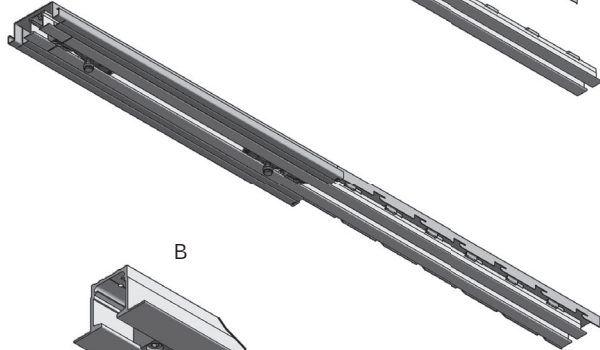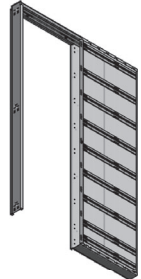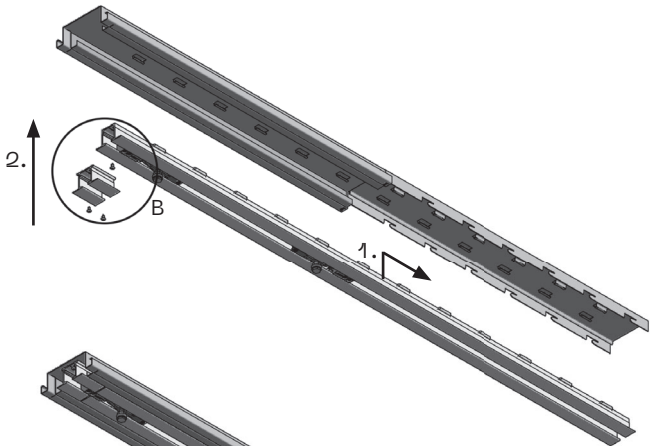

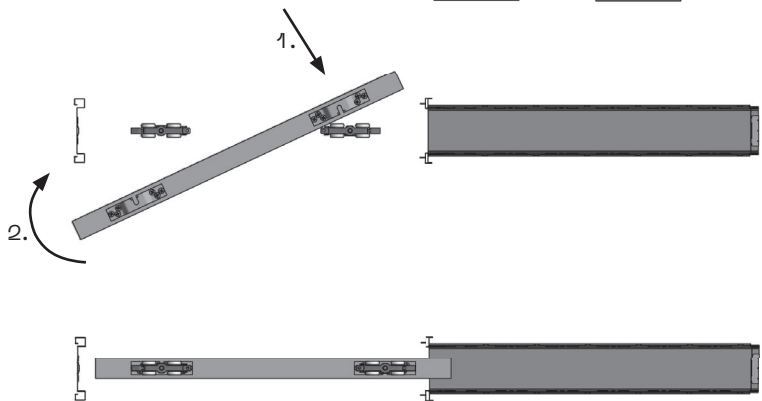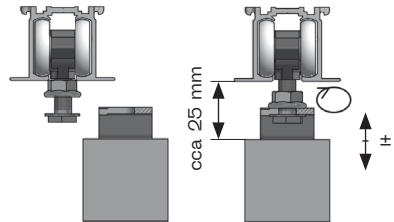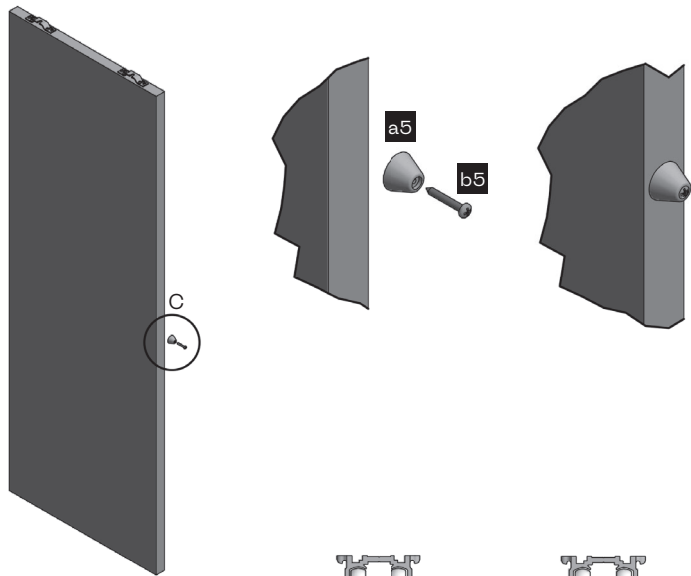

Uřezat podle tlouřtky kapsy.
 Odřezat podľa hrúbky dutiny (kapsy).
 Cut to the pocket thickness.
 Zuschnitt entsprechend der Dicke der Tasche.
 Обрезать согласно толщине кармана.
 Отрежете до дебелината на джоба.
 Vágjuk le a tok vastagságának megfelelően.
 Prerezati prema debljini džepa.
 Odrežite na debelino kasete.
 Tăiați la grosimea buzunarului.
 Виріжіть на товщину кишені.

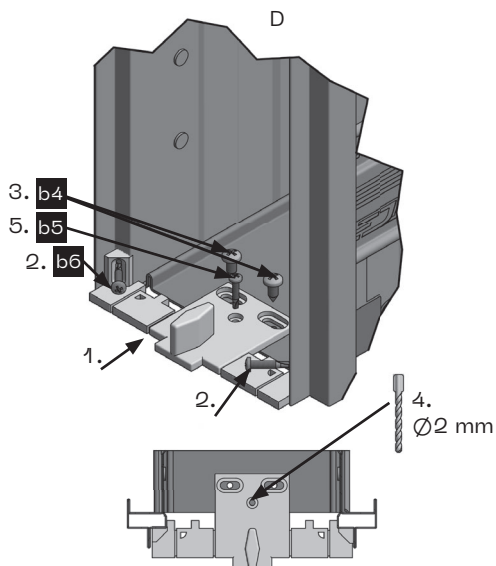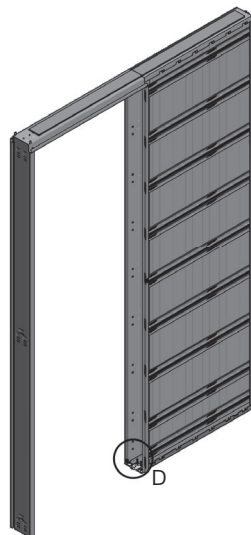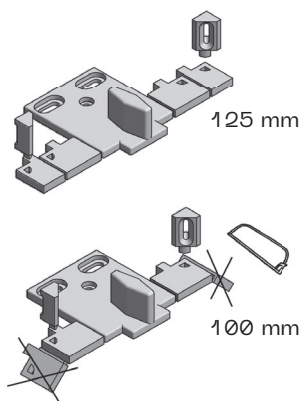

JAP

JAP FUTURE S.R.O.

Nivky 67,
750 02 Přerov III – Lověšice
Czech Republic

IČ: 05533139, DIČ: CZ05533139
+420 581 587 811
jap@japcz.cz

-  www.japcz.cz
-  www.jap.sk
-  www.japcz.com
-  www.japcz.de
-  www.japcz.ru
-  www.jap.bg
-  www.japhu.hu